



# KritterGuard Kennel


## PARTS LIST

6 ft. x 8 ft. x 4 ft.

Description	Quantity
Wire Tie	1 bag
Clip	12
Corners	6
Gate Corners w/ 3 nuts & bolts	2
Fork	1
Collar	1
Gate Hinge	2
Kennel Hinge	2
3/8 in. x 2 in. bolt/nut	4
5/16 in. x 1-1/4 in. bolt/nut	2
5/16 in. x 2 in. bolt/nut	12
Brace clamp	12
Tension bar (long)	2
Gate tension bar (short)	2
Fence fabric (large roll)	1
Gate fence fabric (small roll)	1
Pipe - Long w/ swadge	4
Pipe - Longest	2
Pipe - Longest w/ corner attached	2
Pipe - Medium	5
Pipe - Short	4
Gate Pipe - Wrapped together	
Pipe - Long	2
Pipe - Short	2

## PARTS IDENTIFICATION

WIRE TIE



GATE COLLAR



GATE HINGE




CORNER




CLIP



5/16 in. x 1-1/4 in. Carriage Bolt

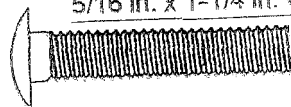

BRACE CLAMP

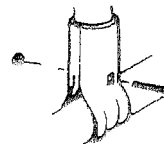


GATE CORNER



GATE FORK



CARRIAGE BOLT 5/16 IN. X 2 IN.  
3/8 IN. X 2 IN.

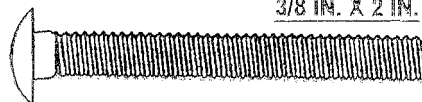

NUT



KENNEL HINGE



**Note: Very large or aggressive animals may require a commercial type kennel.**

**INSTRUCTIONS**

Before assembly - choose a flat surface, such as, a concrete slab, driveway or patio.

**Step 1**

Read all instructions carefully.

**Step 2**

Inventory all parts. Lay all the parts out on a flat surface, (driveway or patio).

**ASSEMBLE TOP AND BOTTOM FRAME RAIL**

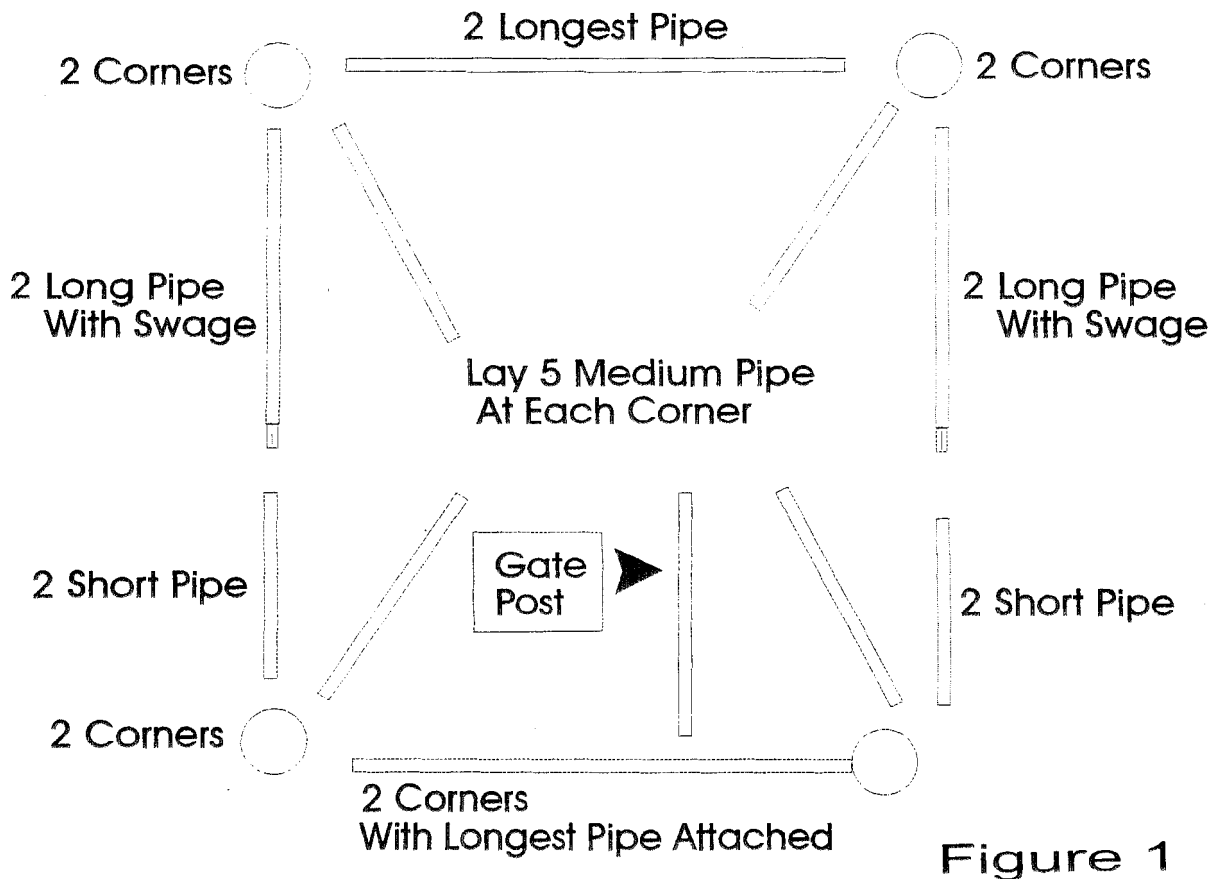


Figure 1

**Step 3**

Lay out the frame lengths in a square as per Figure 1. Place the pipe with the corner fittings attached where gate will be installed. Place two corner fittings in the other corners of the frame.

**Step 4**

Join the bottom rail of the frame. Join a short and a long pipe, the swadged end of the pipe slips into the end of the short pipe forming the 8 ft. length. Attach the corners. Figure 2.

**Step 5**

Loosely attach a brace clamp, with 5/16 in x 2 in. nut and bolt, at the center of each corner. Figure 2.

**Step 6**

Place a support post (medium pipe) into each brace clamp along the bottom frame assembly and tighten. Keep the vertical post supported until they are secured.

## MOUNT TOP OF FRAME

### Step 7

Join the top of the frame then attach the brace clamps in the center of each corner.

### Step 8

With help, carefully lift the top frame assembly and attach the frame to the vertical posts. Tighten bolts.

## INSTALL GATE LATCH POST

### Step 9

Measure exactly 30-1/2 in. from the corner post and attach a brace clamp to the bottom of frame. Insert the gate post (medium pipe length), into the clamp and secure it to the top frame with the second brace clamp.

### Step 10

Tighten all nuts and bolts.

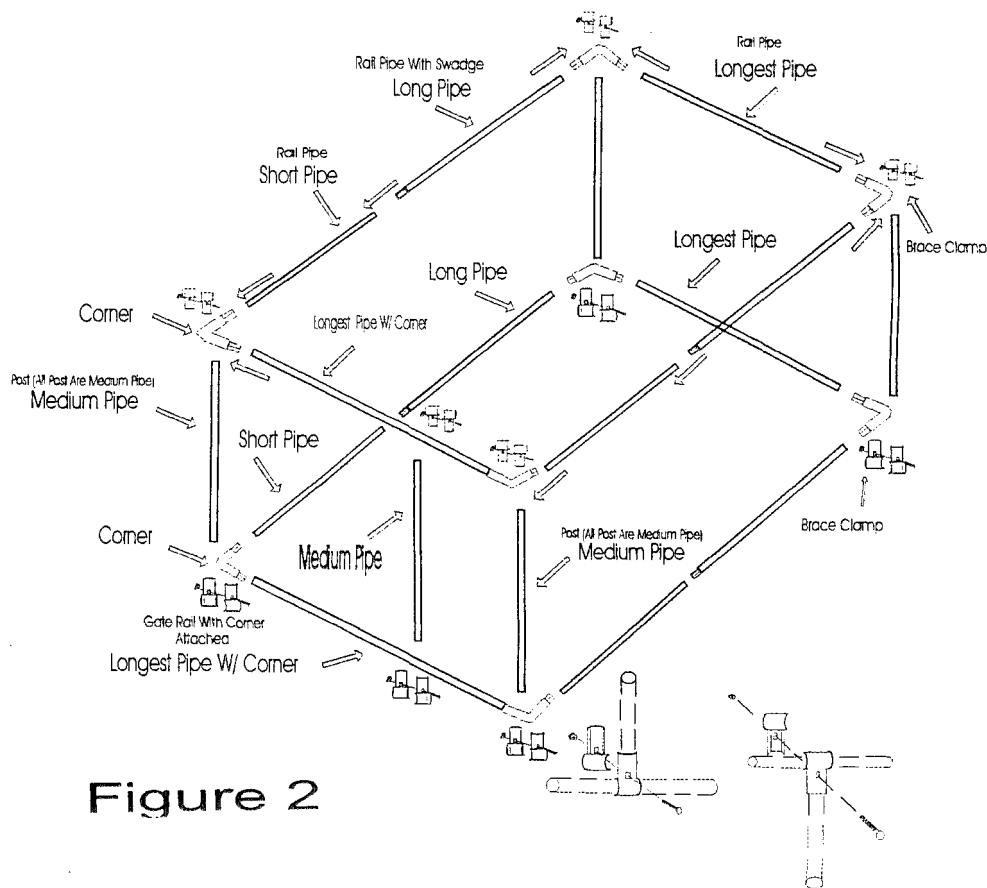


Figure 2

## ATTACH FENCE FABRIC

### Step 11

Unbind the large roll of fence. Use care to insure it does not tangle.

This is a two person job. Insert one long tension bar through the diamond pattern vertically. Figure 3. This is done by weaving the bar in and out of the wire. Hook a clip just above the middle of the tension bar, one person snaps the clip to the gate post. Install three clips, spacing them out evenly.


Pull wire around the entire kennel. At each corner be sure to pull wire tight to the corner. One person should hold the fence fabric tight as the other person unrolls the wire. When the wire is unrolled insert the second long tension bar. Pull wire as tight as possible then attach to post using three clips. Figure 3.

If wire is loose, remove a wire. Pinch ends of wire open then weave out of fence fabric. Figure 3. Do this as many times as it takes to tighten fence fabric. Note: The fabric should be about 4 inches away from corner in order to be tight. If fence is too short add a wire. An extra strand is included in the roll.

## ATTACH WIRE TIES

### Step 12

Begin by attaching wire ties around the top rail of kennel. Attach a wire tie every four diamonds. Install around perimeter of kennel until complete. Use a box or bucket to prop kennel up before installing bottom wire ties. Attach wire ties around bottom, moving the box or bucket as you go to prop the kennel up. This will make installing the wire ties much easier. Install two wire ties to each post. Figure 5.

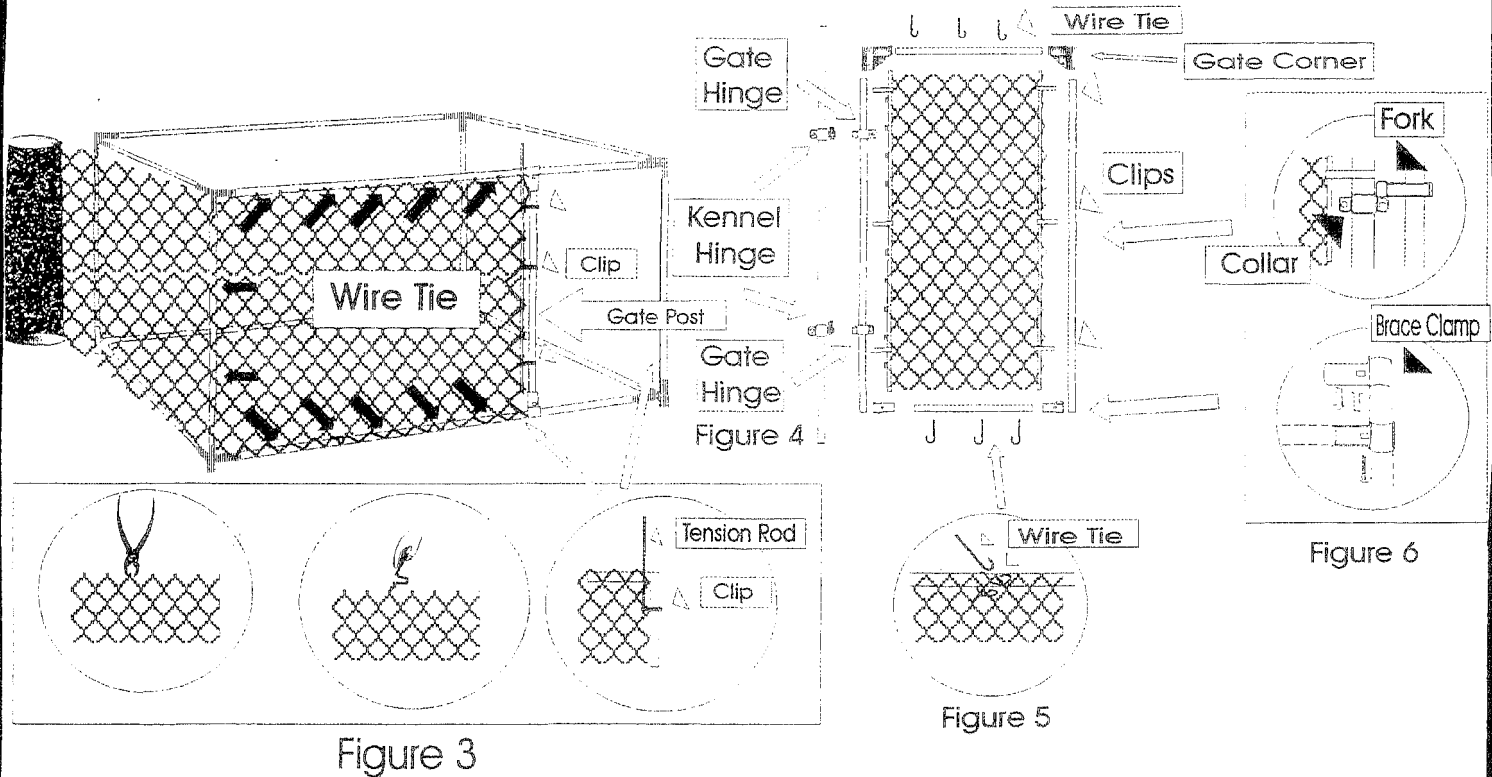

## GATE ASSEMBLY

### Step 13

There are two lengths of pipe. Long, (vertical), short (top and bottom horizontal supports). With the gate corners, short pipe, and long pipe, slip the two lengths of pipe into the gate corner openings. Install nuts/ bolts in gate corners and tighten. Install the gate short pipe at the bottom with brace clamps. Figure 4.

### Step 14

Attach the gate fence fabric. Insert the short gate tension rods, Figure 3. Using the clips, attach fence fabric to frame, Figure 4. It might need to be shortened. If so, remove a wire, Figure 3. Attach gate fork to gate collar using 2 - 5/16 in x 1-1/4 in. nuts/bolts, Figure 6. Attach to gate just above middle of gate frame. Install gate hinges on gate frame and kennel hinges on kennel frame using 4 - 3/8 in. x 2 in. nuts/bolts. Figure 4. Be sure clips do not interfere with the gate latch or the hinges.

### Step 15

Attach two wire ties at the top and two at bottom of the gate frame. Figure 5 and Figure 4. Evenly spaced apart.

You are finished and many thanks for purchasing a petPRO Kennel !!